

Handleiding

SolarEdge Wi-Fi Configuration 1.0



SolarEdge Wi-Fi Configuration

Application Note - Wi-Fi Configuration Using SetApp

Version history - Version 1.0, May 2019 - Initial release

Introduction

This application note describes how to set up Wi-Fi connection between the inverter and the customer's network using the SetApp mobile application. You can configure Wi-Fi communication using one of the following methods:

- Connecting to the customer's Wi-Fi network with a Wi-Fi password.
- WPS (Wi-Fi Protected Setup) - a feature built into modern broadband routers which allows pairing devices without the need for password entry. If the network uses a router without WPS, entering the network password is required.

Wi-Fi Configuration

SetApp connects to the inverter via the communication board Wi-Fi access point, using an internal antenna.



NOTE

SetApp procedure and screens may vary depending on the inverter firmware version.

1. Make sure an external antenna (available from SolarEdge) is installed on the inverter. For installation instructions, refer to <https://www.solaredge.com/sites/default/files/se-wifi-zigbee-antenna-installation-guide.pdf>
2. Access SetApp and select **Communication -> Server -> Wi-Fi**.



solar edge		
Communication		
Server	LAN	>
LAN	DHCP	>
RS485-1	SolarEdge Slave	>
RS485-2	Multi-Device (Modbus)	>
ZigBee	Home Automation Master	>
Wi-Fi	SEDG-7E129A09-33	>
Cellular	N/A	>
GPIO	RRCR	>
Modbus TCP port	Disabled	>

3. Select **Communication -> Wi-Fi**. If this is the first time connection, a message appears to verify the external antenna is connected. Tap **Confirm**. The Wi-Fi screen is displayed.

Wi-Fi	
Connect with WPS	>
Or, choose network:	
<input checked="" type="checkbox"/> SEDG_7E129A09_33	
Owner-WIFI-SSID	

4. Do one of the following:
 - If your router supports WPS mode, you can automatically connect without entering a password:
 1. Select **Communication -> Wi-Fi -> Connect with WPS**. Depending on the firmware version, a few messages may appear; Follow the instructions on the screen
 2. Press the WPS button on your router and hold until a LED lights up (for specific guidelines, refer to your router manual). Connection time may take up to two minutes
 - Otherwise, to connect to a specific network from a list:
 1. Select **Communication -> Wi-Fi**, and select a network from the list
 2. If required, enter the password and tap Join. The system starts the connection process. A few messages may appear; Follow the instructions on the screen. Connection time may take up to two minutes
5. Tap **Disconnect from Inverter** at the bottom of the screen to connect the inverter to the monitoring platform. Check that the blue LED lights up.

Troubleshooting Wi-Fi Connectivity

- If connection between the inverter and the customer's network is problematic, try the following:
- For inverters with FW v. 4.4.xx and lower – Make sure the Wi-Fi router's SSID contains only letters, numbers, and hyphens [-], and does not contain special characters or spaces. Special characters will appear as '\x' in the wireless networks list.
- Make sure the Wi-Fi password is entered correctly. The password is case sensitive.
- For inverters with FW v. 4.5.39 and lower – Make sure you are not using a Wi-Fi hotspot via devices with iOS 12.2 and above.
- For dual-band Wi-Fi routers – Disable the Smart Switch feature or the 5GHz band, as explained in the documentation that comes with the router.